


SG – Spring Guard

Spring Guards protect the hose cover against abrasion and are constructed of steel wire and plated to resist rust.

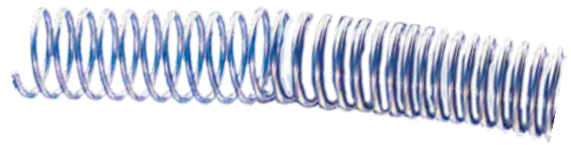

Hose I.D. Part mm Number	SG-060	SG-066	SG-072	SG-084	SG-097	SG-106	SG-113	SG-122	SG-131	SG-155	SG-166	SG-182	SG-209	SG-220	SG-232	SG-270
	15.20	16.75	18.25	21.30	24.60	26.90	28.70	30.95	33.25	39.35	42.15	46.20	53.05	55.85	58.90	68.55
201, 206, 221FR, 225, 235	-4	-5	-6	-8	-10		-12		-16	-20		-24			-32	
213, 285, 293	-4/-5	-6		-8	-10	-12			-16	-20		-24		-32		
301SN, 301TC, 302, 304		-4	-5	-6	-8	-10		-12		-16			-20		-24	
351TC, 402, 421RH, 421SN, 422, 424, 426, 436, 441, 441RH, 451TC, 461LT, 462, 462TC, 463, 471TC, 472TC, 492, 493, 611, 611HT, 681, 681DB, 692	-4	-5	-6	-8	-10		-12			-16		-20	-24			-32
372, 372RH, 371LT, 701					-6	-8		-10	-12	-16			-20		-24	
601	-4		-5	-6	-8				-12	-16		-20				
774, 721TC, 772LT				-6	-8		-10		-12	-16			-20	-24		-32
731, 781, 782TC, P35, 791TC, 792TC									-12		-16		-20		-24	
801, 804, 821FR, 831, 836, 837BM	-4/-5		-6	-8	-10		-12		-16							
811, 881, H29, H29ST, H29TC, H29RH									-12	-16		-20		-24		-32
H31, H31ST, H31TC			-4		-6	-8		-10	-12		-16					
R35, R35TC									-12		-16	-20			-24	
R42, R42ST, R42TC								-10	-12		-16		-20		-24	
R50TC / R56TC					-6	-8		-10	-12		-16		-20			
787TC, 797TC			-6	-8		-10		-12		-16		-20		-24		-32
412	-4/-6															
477	-4	-5	-6	-8		-10			-12	-16						